



C4 - C7 connect as closely as possible to the power pins of IC2 and IC3.

Power connections:

IC2

pin 4: -15V

pin 7: +15V

IC3

pin 11: -15V

pin 4: +15V

**UD-1 DRUM VOICE**

Last Rev: July 29, 2006

Sheet 2 of 2

© 2006 Thomas Henry